

2020

SG - 8 Parts Diagram


Gorilla Concrete Tools

An OBHC Inc. Company


33549 Royalton Road, Unit 9

Columbia Station, OH 44028


(440)236-5112

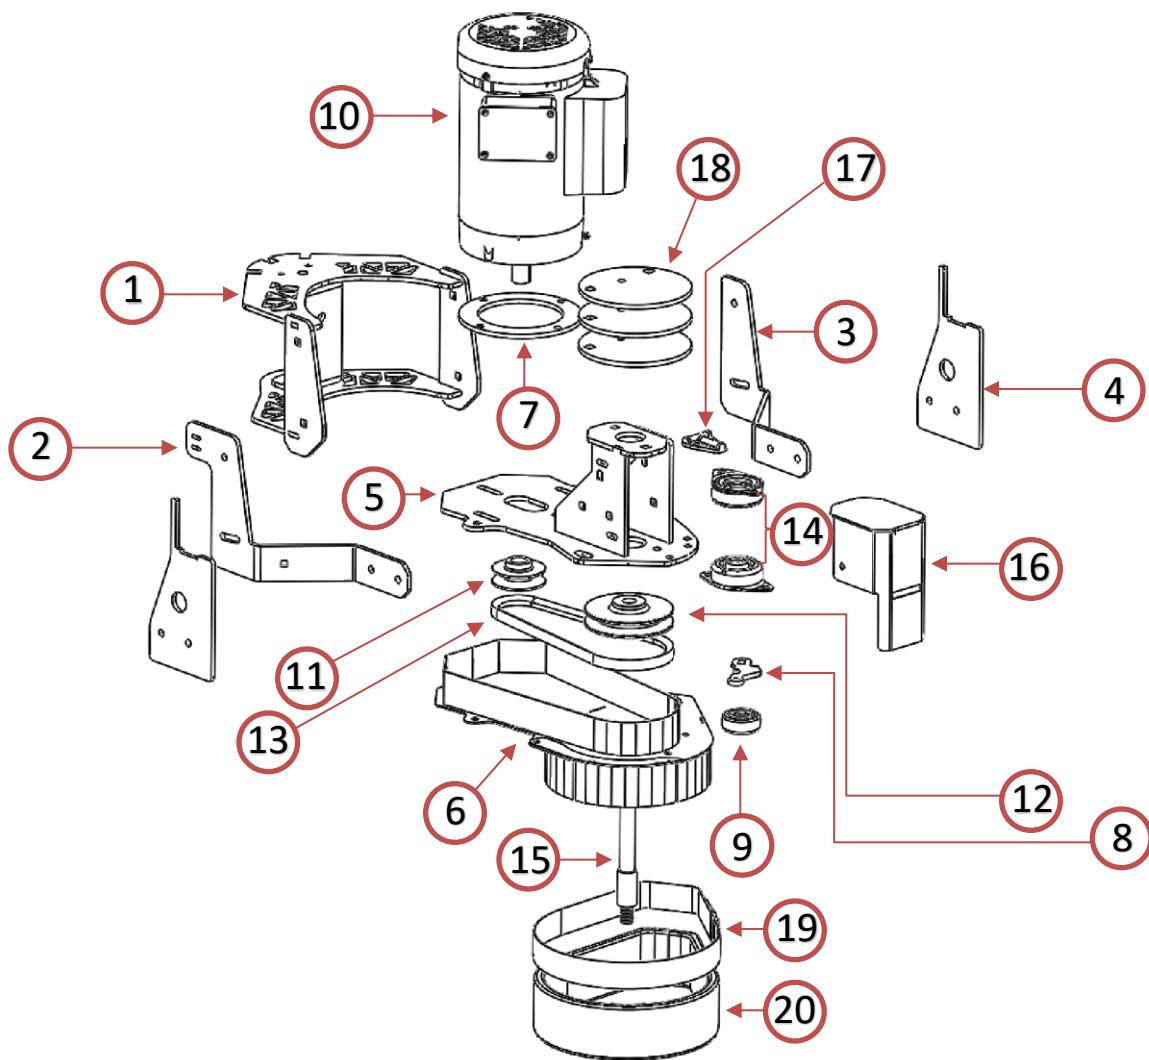

Part number	Description
SG8 – 1	Head cradle
SG8 – 2	Right connecting arm
SG8 – 3	Left connecting arm
SG8 – 4	Weight holder
SG8 – 5	Motor plate
SG8 – 6	Belt/Dust shroud
SG8 – 7	Motor mount spacer
SG8 – 8	Guide wheel mount
SG8 – 9	Guide wheel
SG8 – 10	Motor
SG8 – 11	Driver sheave / motor sheave
SG8 – 12	Driven sheave / tool driver shaft sheave
SG8 – 13	Drive belt
SG8 – 14	Shaft bearing
SG8 – 15	Tool shaft
SG8 – 16	Shaft cover
SG8 – 17	Level
SG8 – 18	Head weights
SG8 – 19	Skirt cinch strap
SG8 – 20	Dust skirt

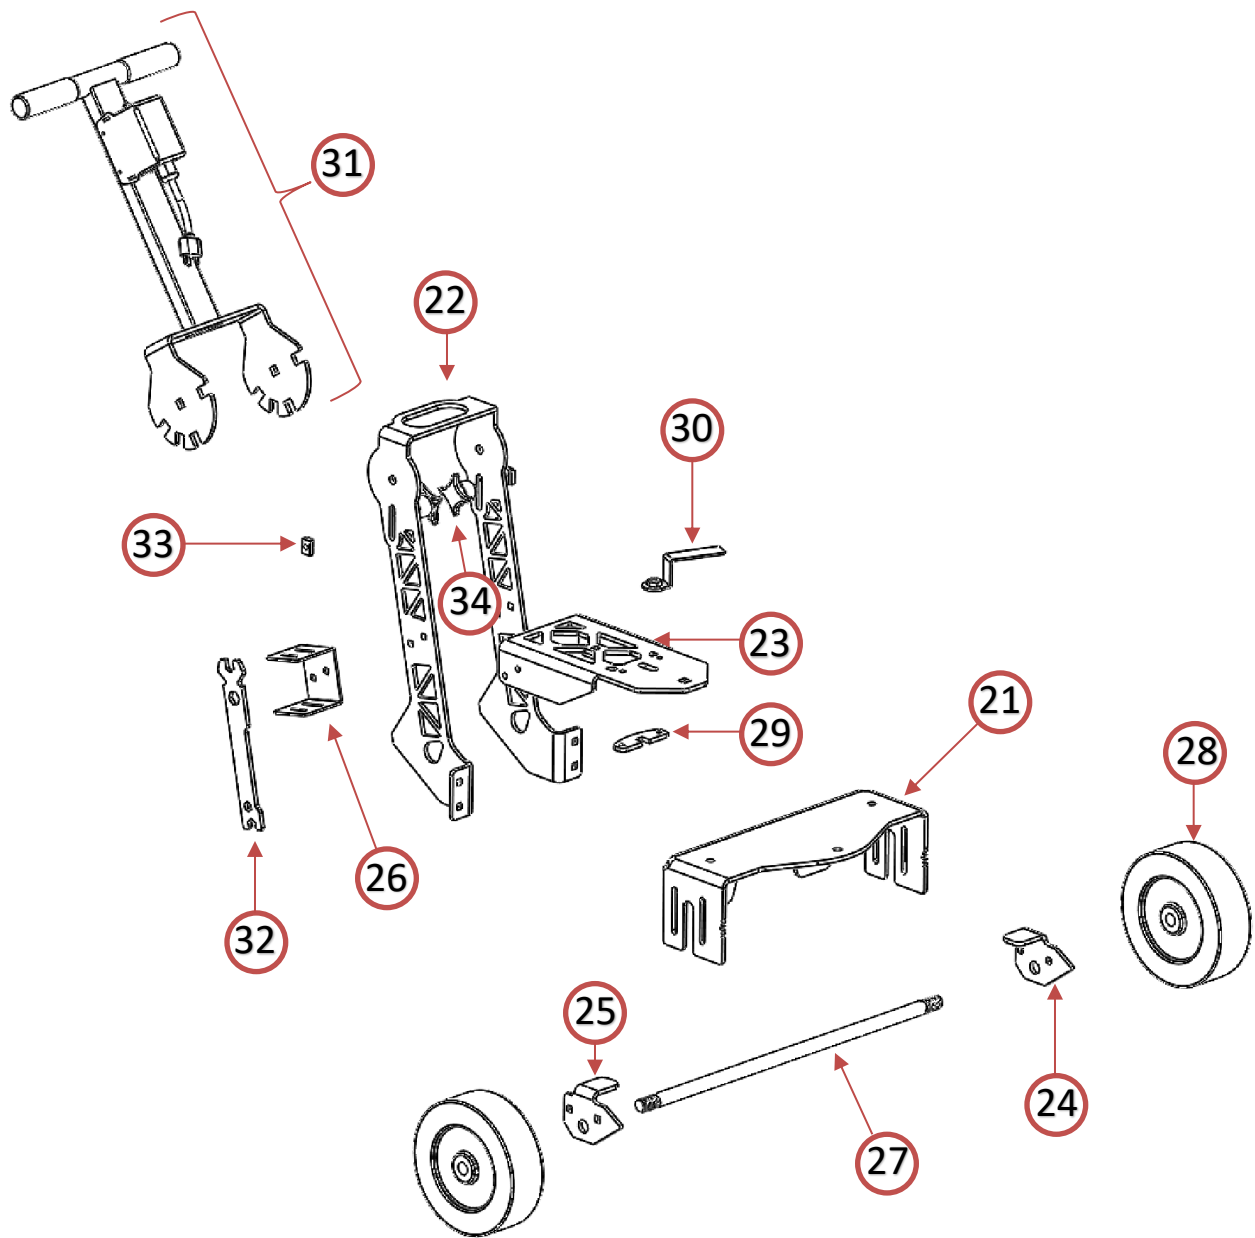

Part number	Description
SG8 – 21	Main base
SG8 – 22	Handle mount
SG8 – 23	Cradle mount
SG8 – 24	Left axle adjustment stop
SG8 – 25	Right axle adjustment stop
SG8 – 26	Wrench holder
SG8 – 27	Rear wheel axle
SG8 – 28	Rear wheel
SG8 – 29	Head position lock
SG8 – 30	Head position locking handle
SG8 – 31	Handle assembly
SG8 – 32	Multi-purpose wrench
SG8 – 33	Handle position stop
SG8 – 34	4-arm knob

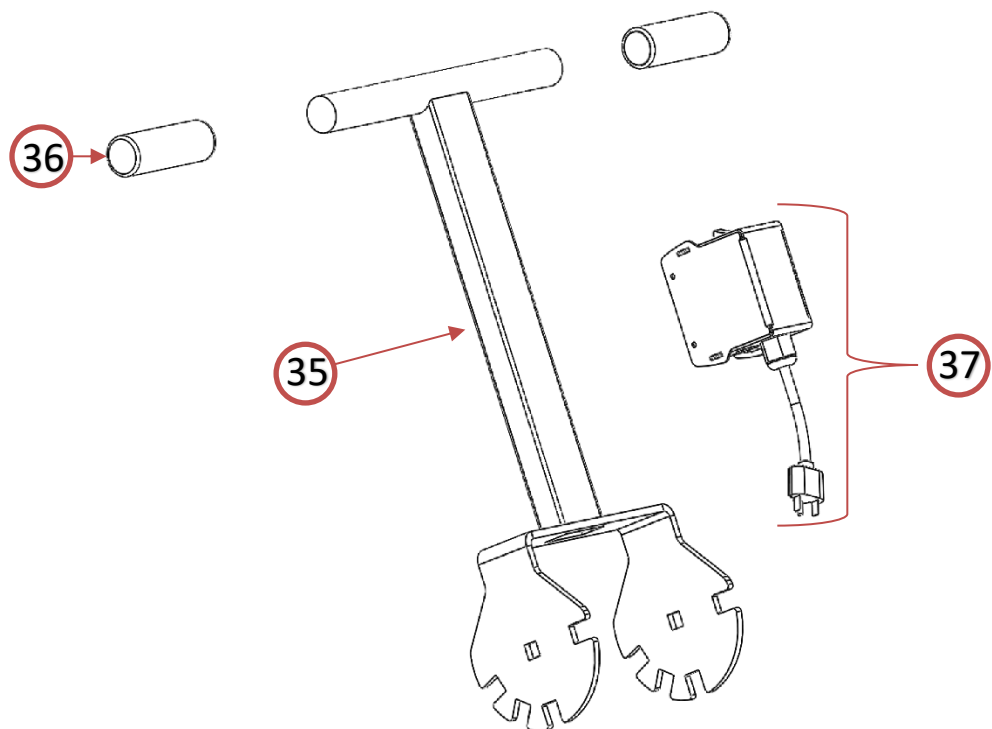

Part number	Description
SG8 – 35	Handle
SG8 – 36	Handle grip
SG8 – 37	Electrical box

Optional Equipment

Part number	Description